



Disassembling the Union Valve to Clean or Tighten

1. Pull off the red handle. The handle then acts as a “key” where the square knobs go into the divits.

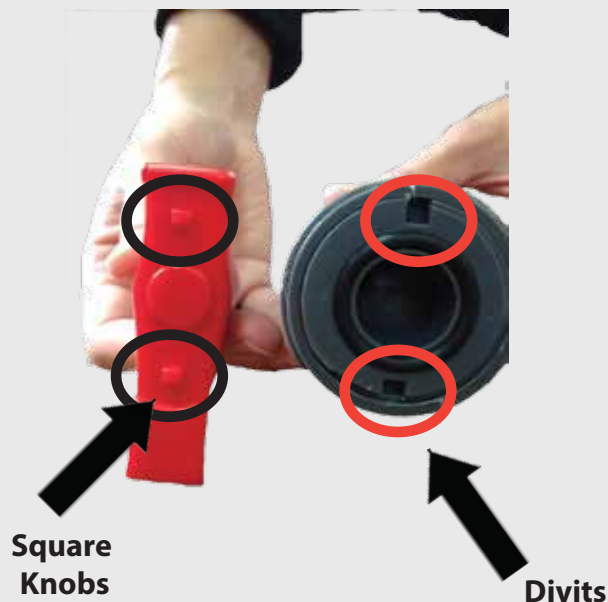

2. Place the red handle into the top of the valve, matching the square knobs with the divits.

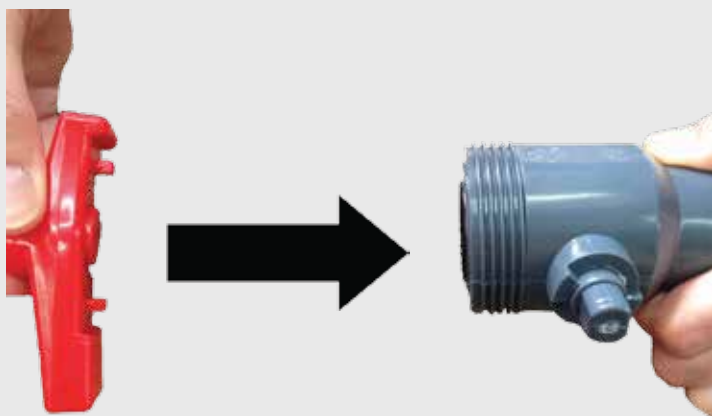

3. Turn the “key” in a counter-clockwise direction to unscrew the middle of the valve. Check all pieces in the valve to ensure they all are in good form. Then, tighten the valve using the “key” in the clockwise direction and ensure it is tight. **DO NOT over-tighten** the valve. When tight, put the red handle back on the valve.



Handle Acts as a Key



Counter - Clockwise to Loosen



Clockwise to Tighten